

## Changing Air Cleaner Element

Use a new Honda Genuine air cleaner element or an equivalent specified for your vehicle.

### NOTICE

Using the wrong air cleaner element may cause premature engine wear or performance problems.

1. Remove the left side cover. ▣ P. 53
2. Remove the air cleaner element by releasing the set spring.
3. Install the new air cleaner element.
  - ▶ Make sure the air cleaner element is installed securely.
4. Install the parts in the reverse order of removal.

