

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 85
<b>Tire Puncture</b> .....	P. 86
<b>Electrical Trouble</b> .....	P. 92
Battery Goes Dead .....	P. 92
Burned-out Light Bulb.....	P. 92
Blown Fuse .....	P. 95