

# Maintenance

Please read “Importance of Maintenance” and “Maintenance Fundamentals” carefully before attempting any maintenance. Refer to “Specifications” for service data.

<b>Importance of Maintenance</b> .....	P. 33	<b>Other Adjustments</b> .....	P. 70
<b>Maintenance Schedule</b> .....	P. 34	Adjusting the Headlight Aim .....	P. 70
<b>Maintenance Fundamentals</b> .....	P. 37		
<b>Tool</b> .....	P. 48		
<b>Removing &amp; Installing Body Components</b> ..	P. 49		
Battery .....	P. 49		
Battery Cover.....	P. 50		
<b>Spark Plug</b> .....	P. 51		
<b>Engine Oil</b> .....	P. 53		
<b>Brakes</b> .....	P. 56		
<b>Side Stand</b> .....	P. 63		
<b>Drive Chain</b> .....	P. 64		
<b>Throttle</b> .....	P. 68		
<b>Crankcase Breather</b> .....	P. 69		