


## Starting the Engine *(Continued)*

- 4 Press the start button with the throttle completely closed.
  - ▶ If you cannot start the engine, open the throttle slightly (about 0.1 in (3 mm), without freeplay) and press the start button.

**About 0.1 in (3 mm), without freeplay**

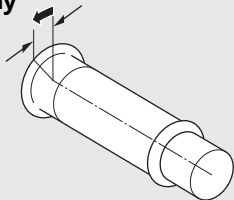

### If the engine does not start:

- ① Open the throttle fully and press the start button for 5 seconds.
- ② Repeat the normal starting procedure.
- ③ If the engine starts, open the throttle slightly if idling is unstable.
- ④ If the engine does not start, wait 10 seconds before trying step ① & ② again.

**If Engine Will Not Start** ➔ P.79