


# ENGINE GROUP

E-8


OIL PUMP

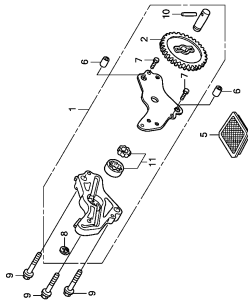

KMP/E11000

E-9


LEFT CRANKCASE COVER

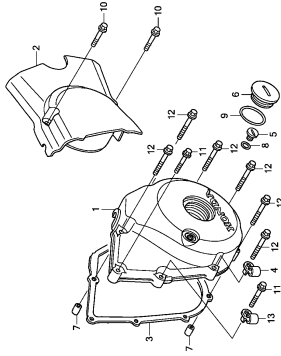

KMP/E1000A

E-10


GENERATOR

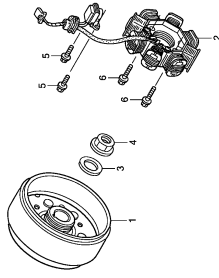

KMP/E1000

E-11


STARTING CLUTCH

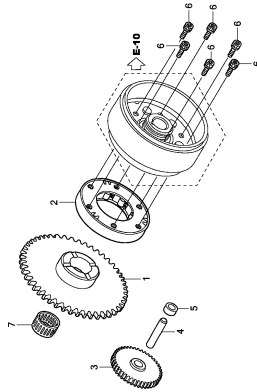

KMP/E11000

E-12


STARTING MOTOR

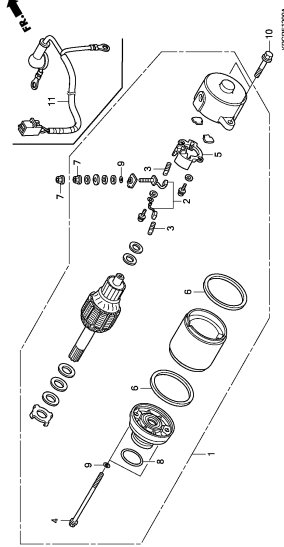

KMP/E1000A

E-13


CRANKCASE

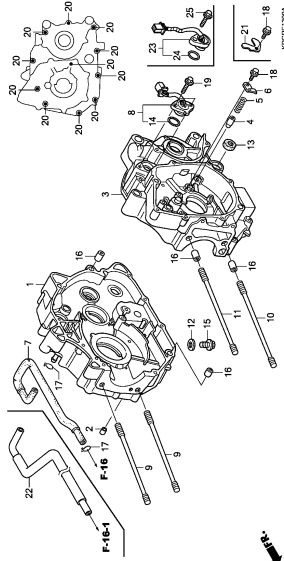

KMP/E1000A

E-14


CRANKSHAFT/PISTON

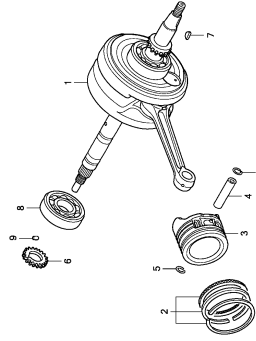

KMP/E1000

E-15


TRANSMISSION

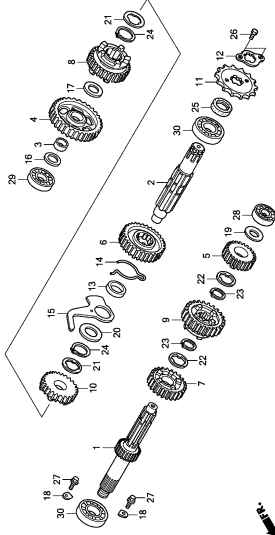

KMP/E1000A

E-16

GEARSHIFT DRUM

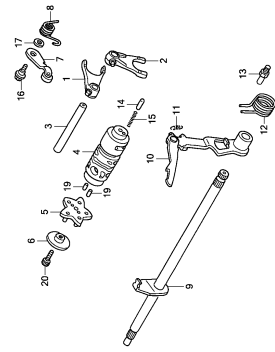

KMP/E1000