

1	SWITCH, HORN BUTTON	35300-212-000
1	SWITCH, HORN BUTTON	35300-223-000
1	SWITCH, DIMMER	35300-284-810
2	SWITCH, STARTER	35800-215-000
3	ADJUSTER	53163-271-000
4	SCREW	90124-268-000
5	SCREW, PAN (5X14)	93500-05014
5	SCREW, PAN (5X14)	93500-05014-0A
6	NUT, HEX. (5MM)	94001-05000
6	NUT, HEX. (5MM)	94001-05000-0S

