


E - 12

Transmission

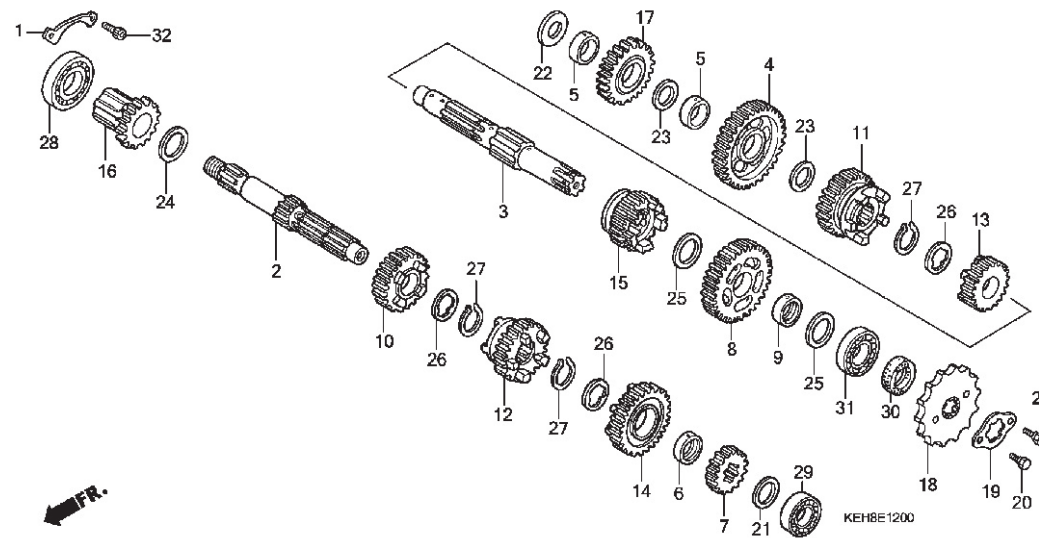

Bagian yang diservice	F.R.T.	Nomor Petunjuk	Nomor Part	Uraian Part	Jumlah	Nomor Serie	Catatan
MAINSHAFT, TRANSMISSION..... 4.5		1	11108-KCN-000	PLATE, BEARING SETTING	1		
.INCLUDES: ENGINE REMOVAL AND INSTALLATION		2	23211-KEH-660	MAINSHAFT, TRANSMISSION (13T)	1		
REPLACE COUNTERSHAFT ADD ----. 0.2		3	23221-KCT-690	COUNTERSHAFT, TRANSMISSION	1		
COUNTERSHAFT, TRANSMISSION ... 4.5		4	23426-KCN-000	GEAR, COUNTERSHAFT LOW (36T)	1		
.INCLUDES: ENGINE REMOVAL AND INSTALLATION		5	23427-439-000	COLLAR, COUNTERSHAFT LOW GEAR	2		
REPLACE MAINSHAFT ADD..... 0.2		6	23431-KFB-000	BUSH, 20MM	1		
SPROCKET, DRIVE 0.2		7	23441-KCN-000	GEAR, MAINSHAFT SECOND (18T)	1		
BEARING, MAINSHAFT :RIGHT..... 5.2		8	23451-KCN-000	GEAR, COUNTERSHAFT SECOND (31T)	1		
.INCLUDES: ENGINE REMOVAL AND INSTALLATION		9	23452-KW1-900	BUSH, 20X23X9	1		
BEARING, MAINSHAFT :BOTH..... 5.4		10	23461-KCN-000	GEAR, MAINSHAFT THIRD (19T)	1		
.INCLUDES: ENGINE REMOVAL AND INSTALLATION		11	23471-KCN-000	GEAR, COUNTERSHAFT THIRD (24T)	1		
BEARING, MAINSHAFT :LEFT..... 4.5		12	23481-KCN-000	GEAR, MAINSHAFT FOURTH (22T)	1		
.INCLUDES: ENGINE REMOVAL AND INSTALLATION		13	23491-KCN-000	GEAR, COUNTERSHAFT FOURTH (22T)	1		
BEARING, MAINSHAFT AND COUNTERSHAFT :ALL..... 5.5		14	23501-KCN-000	GEAR, MAINSHAFT FIFTH (31T)	1		
.INCLUDES: ENGINE REMOVAL AND INSTALLATION		15	23511-KCN-010	GEAR, COUNTERSHAFT FIFTH (26T)	1		
BEARING, MAINSHAFT :LEFT..... 4.5		16	23520-KCT-690	GEAR COMP., STARTER	1		
.INCLUDES: ENGINE REMOVAL AND INSTALLATION		17	23531-KCT-690	GEAR ONLY, IDLE STARTER	1		
BEARING, COUNTERSHAFT : LEFT ... 4.5		18	23801-KCT-690	SPROCKET, DRIVE (14T)	1		
		19	23811-KR3-600	PLATE A2, FIXING	1		
		20	90084-041-000	BOLT, DRIVE SPROCKET FIXING	2		
		21	90451-107-000	WASHER, THRUST, 15MM	1		
		22	90451-365-000	WASHER, THRUST, 15MM	1		
		23	90452-437-000	WASHER, THRUST, 16.5MM	2		