

F-37 Winker Switch · Dimmer Switch

Ref. No.	Part No.	Description	Reqd. No.		No. Used on		News No.
			68 175	61 175	From	To	
1	35250-235-000	SWITCH ASSY., winker, with horn button	1	1	CB175-1000001.....	CL175-1000001	
2	35253-001-000	BUTTON, horn switch	1	1	CB175-1000001.....	CL175-1000001	
3	35300-236-671	SWITCH ASSY., dimmer, with starter button	1		CB175-1000001.....		
	35300-235-671	SWITCH ASSY., dimmer, with starter button		1	CL175-1000001.....		
4	35315-235-000	BUTTON, starter switch.....	1		CB175-1000001.....		
5	35316-235-000	KNOB, dimmer switch	1	1	CB175-1000001.....	CL175-1000001	
6	35317-235-000	KNOB, winker switch	1	1	CB175-1000001.....	CL175-1000001	
7	35318-259-000	SPRING, horn button	2	1	CB175-1000001.....	CL175-1000001	
8	53163-205-010	ADJUSTER, throttle grip	1	1	CB175-1000001.....	CL175-1000001	
9	88110-240-000	BACK-MIRROR, right	1	1	CB175-1000001.....	CL175-1000001	
10	88120-235-000	BACK-MIRROR, left	1	1	CB175-1000001.....	CL175-1000001	
11	90124-268-000	SCREW, throttle grip adjusting	1	1	CB175-1000001.....	CL175-1000001	
12	90314-240-000	NUT, hex., 10 mm.....	2	2	CB175-1000001.....	CL175-1000001	
13	93500-05025	SCREW, cross, 5×25	4	4		
14	94001-05000	NUT, hex., 5 mm	1	1		