


# F 15

## F-32 Battery · Selen · Magnetic Switch

## F-32 Battery · Selen · Magnetic Switch

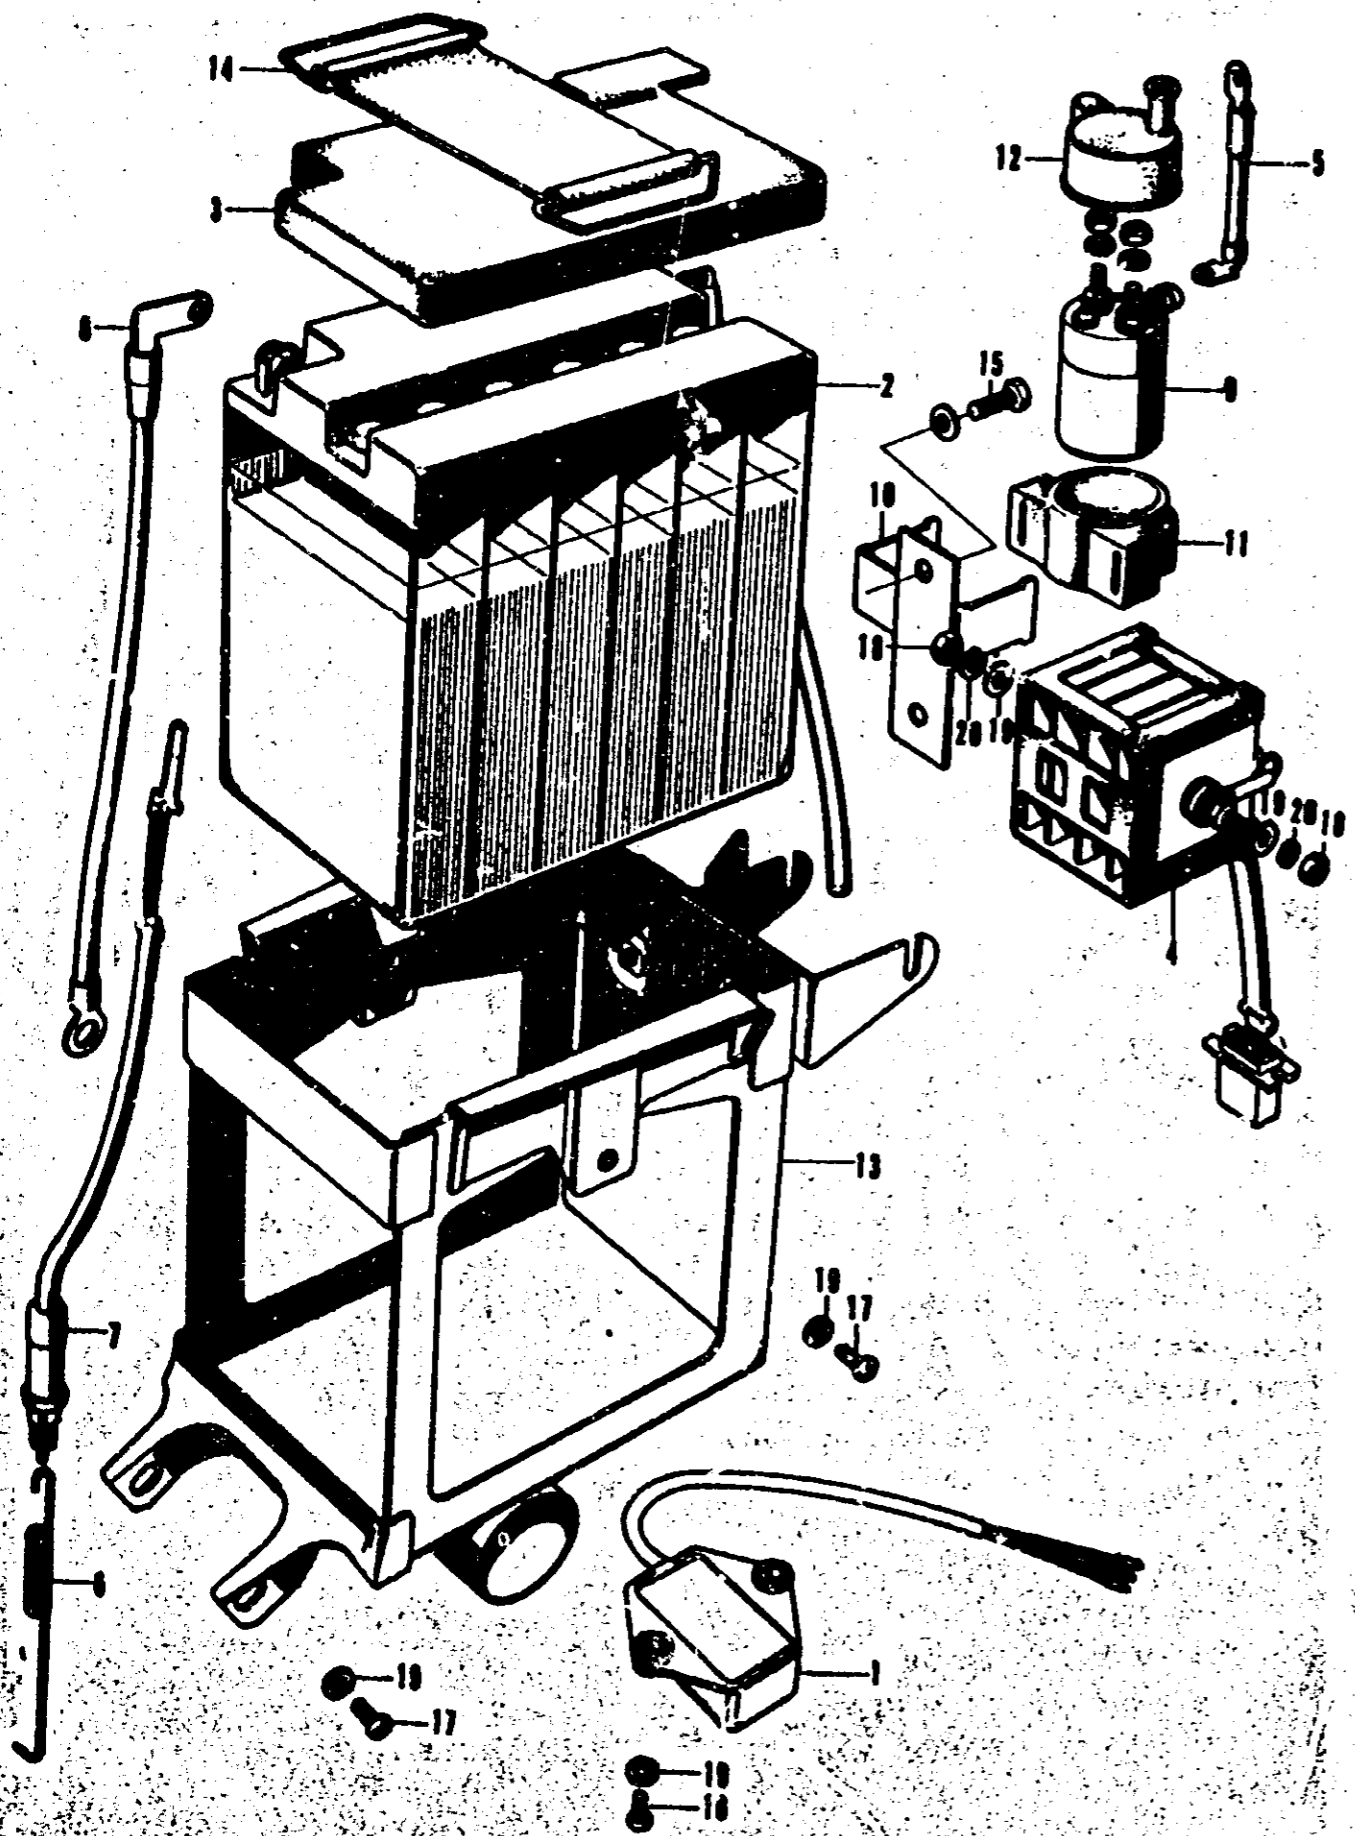

Ref. No.	Part No.	Description	Reqd. No.				Remarks
			272K2	350K2	60 61 62 63		
1	31400-292-670	REGULATOR, pointless.....	1	1	1	1	
2	31500-292-670	BATTERY ASSY., .....	1	1	1	1	
3	31532-292-010	COVER, battery .....	1	1	1	1	
4	31700-292-008	RECTIFIER ASSY., selenium .....	1	1	1	1	
5	32401-286-010	CABLE, starter battery .....	1	1	1	1	
6	32601-286-000	CABLE, battery earth .....	1	1	1	1	
7	35350-292-003	SWITCH ASSY., stop .....	1	1	1	1	
8	35357-286-010	SPRING, stop switch .....	1	1	1	1	
9	35850-286-027	SWITCH ASSY., starter magnetic.....	1	1	1	1	
10	35855-286-000	STAY, magnetic rubber.....	2	1	1	1	
11	35856-286-010	RUBBER, magnetic shock.....	1	1	1	1	
12	35857-286-000	COVER, magnetic switch .....	1	1	1	1	
13	50325-286-020B	BOX, battery (Black) .....	1	1	1	1	
14	83631-283-010	(Superseded by 83631-310-000)					
	83631-310-000	BAND, battery .....	1	1	1	1	
15	92000-06010	BOLT, hex., 6x10 .....	2	2	2	2	
16	92000-06016	BOLT, hex., 6x16 .....	2	2	2	2	
17	93500-06010	SCREW, pan, 6x10.....	4	4	4	4	
18	94001-06000	NUT, hex., 6 mm .....	2	2	2	2	
19	94101-06000	WASHER, plain, 6 mm .....	6	6	6	6	
20	94111-06000	WASHER, spring, 6 mm .....	2	2	2	2	