


E - 8

Oil pump

Pompe à huile

Ölpumpe

Bombe de aceite

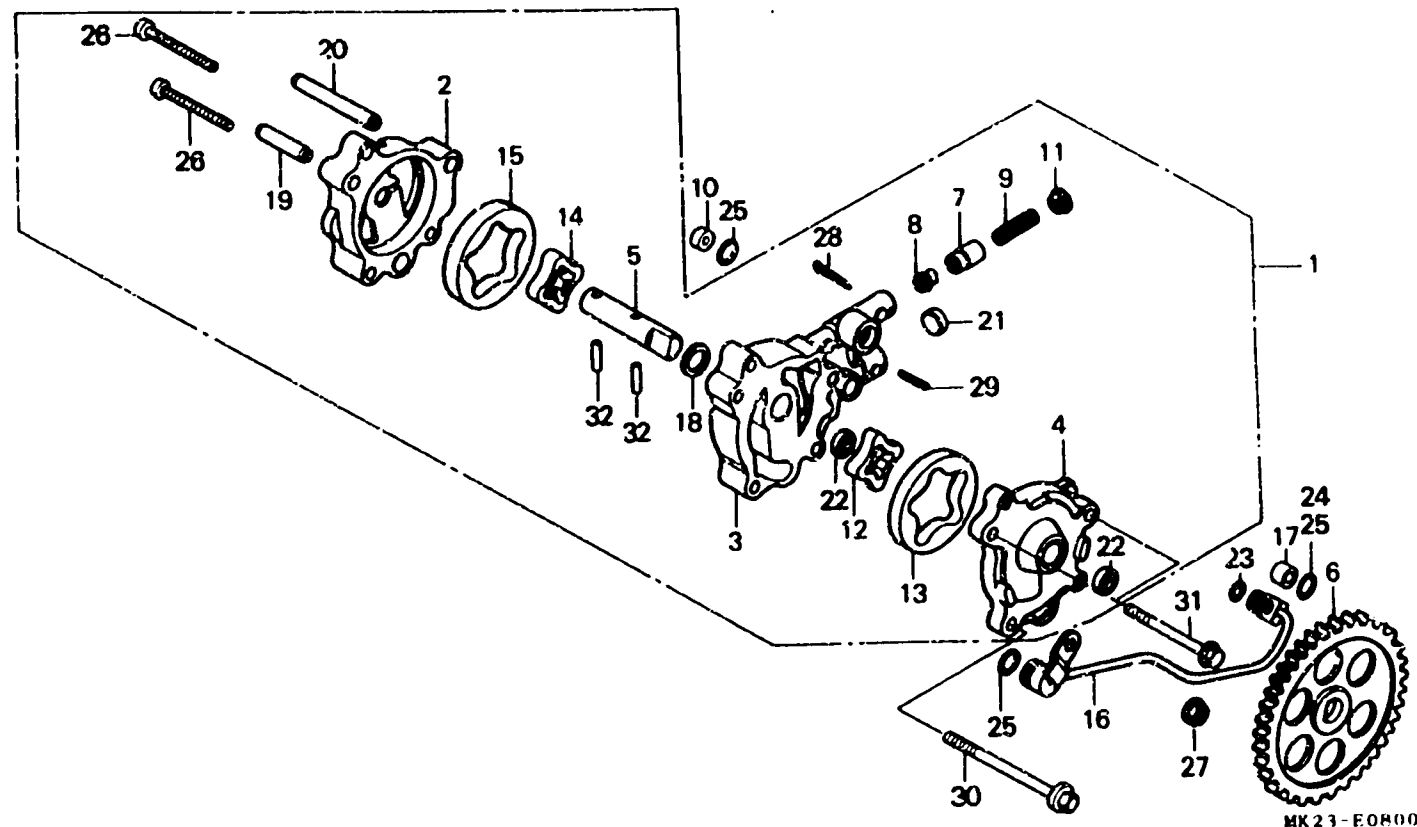

Item d'entretien	T.D.R.	N° de réf.	N° de pièce	Description	N° de requis								N° de série	Code de zone
					RF	RG	RH	RJ	RK	RL	RM	RN		
		7	15106-MG3-000	VALVE D'ETANCHEITE D'HUILE....	1	1	1	1	1	1	1	1		
		8	15107-MG3-000	SIEGE DE VALVE D'ETANCHEITE HUILE	1	1	1	1	1	1	1	1		
		9	15108-MG3-000	RESSORT DE VALVE D'ETANCHEITE HUILE	1	1	1	1	1	1	1	1		
		10	15109-MG3-000	ORIFICE, 3.3MM.....	1	1	1	1	1	1	1	1		
		11	15111-MG3-000	SIEGE B DE RESSORT.....	1	1	1	1	1	1	1	1		
		12	15115-MG3-000	ROTOR INTERIEUR A DE POMPE A HUILE	1	1	1	1	1	1	1	1		
		13	15116-MG3-000	ROTOR EXTERIEUR A DE POMPE A HUILE	1	1	1	1	1	1	1	1		
		14	15121-MG3-000	ROTOR INTERIEUR.....	1	1	1	1	1	1	1	1		
		15	15122-MG3-000	ROTOR EXTERIEUR.....	1	1	1	1	1	1	1	1		
		16	15510-MK2-000	TUYAU COMP. D'HUILE.....	1	1	1	1	1	1	1	1		
		17	17958-197-300	SUPPORT.....	1	1	1	1	1	1	1	1		

1991.07.10

E

F9