



INSTALLATION

Align the rotor keyway with the key on the crankshaft and install the generator rotor.

Tighten the rotor nut.

TORQUE: 3.0–3.8 kg-m (22–28 ft-lb)

FLYWHEEL HOLDER



Install the stator on the left crankcase cover with the screws.

Route the generator leads properly and install the wire protector.

WIRE PROTECTOR

STATOR



Connect the neutral switch lead to the switch terminal.

Install the left crankcase cover, drive sprocket cover and gearshift pedal.

Connect the generator wire coupler.

Install the front cover.

NEUTRAL SWITCH



WIRE LEAD