

FRAME	LOCATION	MATERIAL	REMARKS
	Seat catch hook sliding area Front wheel dust seal lips Rear wheel dust seal lips Clutch lever pivot bolt sliding area Rear brake pedal pivot sliding area Gearshift pedal pivot Side stand pivot Steering head bearing sliding surface Steering head dust seal lips Swingarm pivot bearings Swingarm pivot dust seal lips Shock absorber needle bearings Shock absorber dust seal lips	Multi-purpose grease	
	Throttle cable A, B outer inside Clutch cable outer inside	Cable lubricant	
	Handlebar grip rubber inside	Honda bond A, Honda Hand Grip Cement (U.S.A. only or equivalent)	
	Steering bearing adjustment nut threads	Engine oil	
	Front brake lever-to-master piston contacting area Front brake lever pivot Rear master brake master piston-to-push rod contacting area Brake caliper dust seals Rear brake caliper boot inside Rear brake caliper pin boot inside	Silicone grease	
	Brake master piston and cups Brake caliper piston and piston seals	DOT 4 brake fluid	
	Fork cap O-ring Fork dust seal and oil seal lips	Pro Honda Suspension Fluid SS-8	
	Rear brake reservoir hose joint screw threads Front brake caliper assembly bolt threads Rear brake caliper pin bolt threads Front fork socket bolt threads	Locking agent	