 
EMISSION CONTROL INFORMATION LABELS (U.S.A. ONLY)

An Emission Control Information Label is located on the main frame as shown. It gives base tune-up specifications.

The fuel tank must be lifted up to read it. Refer to page 3-15 for fuel tank opening.



VACUUM HOSE ROUTING DIAGRAM LABEL (CALIFORNIA TYPE ONLY)

The Vacuum Hose Routing Diagram Label is on the main frame as shown.

The fuel tank must be lifted up to read it. Refer to page 3-15 for fuel tank opening.

