

SEAT

REMOVAL


Unhook the seat with the ignition key.

Pull the seat back and remove it.

INSTALLATION

Align the seat hooks with the frame hooks and push the seat forward.

Push the seat down until it locks.

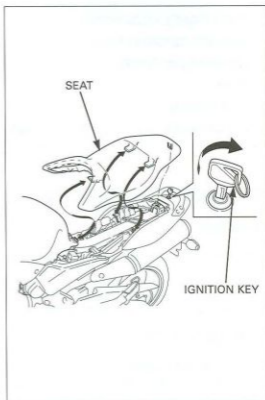

SIDE COVER


REMOVAL

Remove the seat (page 2-2).

Remove the side cover bolt.
Remove the front tab from the fuel tank and remove the rear tab from the grommet of the frame.

Remove the side cover.

Installation is in the reverse order of removal.

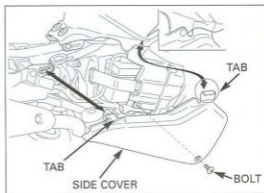

AIR CLEANER HOUSING SIDE COVER

REMOVAL/INSTALLATION

Remove the socket bolts and air cleaner housing side cover.

Installation is in the reverse order of removal.

