

3. MAINTENANCE

SERVICE INFORMATION	3-1	DRIVE CHAIN	3-16
MAINTENANCE SCHEDULE	3-3	DRIVE CHAIN SLIDER	3-20
FUEL LINE	3-4	BRAKE FLUID	3-20
THROTTLE OPERATION	3-4	BRAKE PAD WEAR	3-21
CHOKE OPERATION	3-5	BRAKE SYSTEM	3-21
AIR CLEANER	3-5	BRAKE LIGHT SWITCH	3-22
CRANKCASE BREATHER	3-6	HEADLIGHT AIM	3-22
SPARK PLUG	3-6	CLUTCH SYSTEM	3-23
VALVE CLEARANCE	3-7	SIDE STAND	3-24
ENGINE OIL/OIL FILTER	3-12	SUSPENSION	3-24
ENGINE IDLE SPEED	3-13	NUTS, BOLTS, FASTENERS	3-25
RADIATOR COOLANT	3-13	WHEELS/TIRES	3-25
COOLING SYSTEM	3-14	STEERING HEAD BEARINGS	3-26
SECONDARY AIR SUPPLY SYSTEM	3-15		
EVAPORATIVE EMISSION CONTROL SYSTEM (California type only)	3-15		

SERVICE INFORMATION

GENERAL

- Place the motorcycle on a level ground before starting any work.
- Gasoline is extremely flammable and is explosive under certain conditions.
- Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where the gasoline is stored can cause a fire or explosion.
- If the engine must be running to do some work, make sure the area is well ventilated. Never run the engine in an enclosed area.
- The exhaust contains poisonous carbon monoxide gas that may cause loss of consciousness and may lead to death. Run the engine in an open area or with an exhaust evacuation system in an enclosed area.