 


Measure the voltage between the terminals of the wire harness side.



Connection:

Gray/Blue (+) - Ground (-)
Standard: 4.75 - 5.25 V

Out of range

- Open or short circuit in Gray/Blue wire
- Loose or poor contact on the ECM connectors

Voltage exists

Measure the voltage between the terminals of the wire harness side.



Connection:

Gray/Blue (+) - Green/Orange (-)
Standard: 4.75 - 5.25 V

Out of range

- Open or short circuit in Green/Orange wire
- Loose or poor contact on the ECM connectors

Voltage exists

- Replace the ECM with a new one, and inspect it again