

FUEL SYSTEM (Programmed Fuel Injection)


FUEL FILTER REPLACEMENT

Disconnect the fuel tubes from the fuel filter.
Remove the screws and fuel filter.

*Note the direction
of the fuel filter.*

Install the fuel filter in the reverse order of removal.

*Do not damage
the fuel reserve
sensor.*

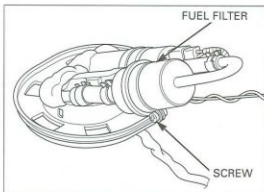


INSTALLATION

*Always replace
packing with a
new one.*


Place new packing onto the fuel tank.

Install the fuel pump, being careful not to damage the fuel pump wire.

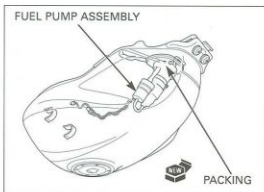

Install and tighten the fuel pump mounting nuts in the sequence shown.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

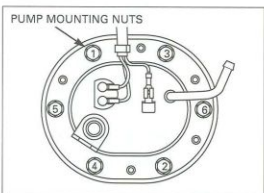

FUEL CUT RELAY

INSPECTION

Remove the rear cowl (page 2-3).

*Check the wire
color when you
select the fuel cut
relay.*

Disconnect the fuel cut relay 4P connector, remove the fuel cut relay.

