


## FUEL SYSTEM (Programmed Fuel Injection)


Install the following:

- fuel tank over flow hose
- fuel tank air vent hose
- fuel pump/reserve sensor 3P connector

Connect the fuel return tube to the pressure regulator. Connect the fuel pump/reserve sensor 3P (Black) connector.

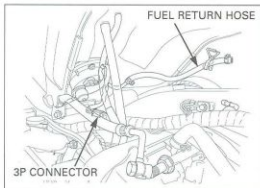

Install and tighten the fuel tank maintenance bolt. Support the front end of the fuel tank.

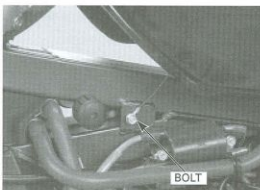

Connect the fuel hose banjo to the throttle body with new sealing washers.

While pushing the fuel hose banjo stopper to the throttle body, install and tighten the sealing nut to the specified torque.

NOTE:

- Do not apply excessive force to the fuel pipe.
- Always hold the fuel pipe nut while tightening the fuel hose sealing nut.

**TORQUE: 22 N·m (2.2 kgf·m, 16 lbf·ft)**



Remove the supporting tool and close the fuel tank.

Slide the fuel tank forward and install the fuel tank stay to the frame rubber.

Tighten the fuel tank mounting bolt/nut to the specified torque.

**TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)**

Install the side cover (page 2-2).

