


## PAIR SOLENOID VALVE

### REMOVAL/INSTALLATION


Remove the air cleaner housing (page 5-60).

Disconnect the PAIR solenoid valve 2P (Black) connector.

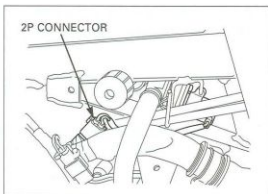

Disconnect the PAIR air suction hose and air injection hoses.

Remove the bolt and PAIR solenoid valve.

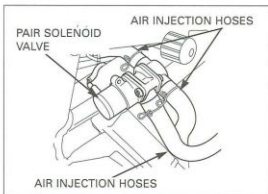


Installation is in the reverse order of removal.

### INSPECTION

Remove the PAIR solenoid valve.

Check that air flows (A) to (B) only when the 12 V battery is connected to the PAIR solenoid valve terminals.

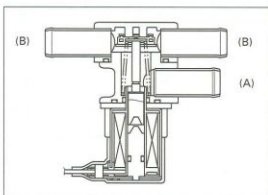

Check the resistance between the terminals of the PAIR solenoid valve.

**STANDARD: 20 - 24 (20 °C/68°F)**

If the resistance is out of specification, replace the PAIR solenoid valve.

