

Remove the valve spring cotters using the special tools as shown.


TOOLS:

Valve spring compressor 07757-0010000

Valve spring compressor attachment
07959-KM30101

NOTICE


To prevent loss of tension, do not compress the valve springs more than necessary to remove the cotters.

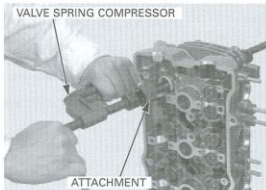

Mark all parts during disassembly so they can be placed back in their original locations.


Remove the following:

- Spring retainer
- Valve spring
- Valve
- Stem seal
- Valve spring seat

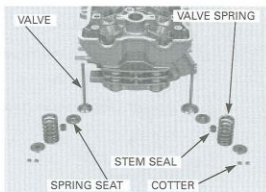**CYLINDER HEAD INSPECTION****CYLINDER HEAD**

Avoid damaging the gasket surface.

Remove carbon deposits from the combustion chamber, being careful not to damage the gasket surface. Check the spark plug hole and valve areas for cracks.

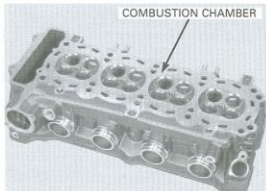

Check the cylinder head for warpage with a straight edge and feeler gauge.

SERVICE LIMIT: 0.10 mm (0.004 in)

