 
Remove the stopper tool from the cam chain tensioner lifter.



 
Install a new sealing washer and tighten the sealing bolt.

Recheck the valve timing.



Apply oil to the new O-ring, and install it onto the cam pulse generator.

Install the cam pulse generator into the cylinder head.



Install and tighten the mounting bolt securely.

