

## CRANKCASE/PISTON/CYLINDER

---

Apply clean engine oil to the new O-ring and install it to the sealing plug.  
Install the sealing plug to the crankcase.

Install the removed parts in the reverse order of removal.

