


Install the bearing remover head into the bearing. From the opposite side, install the bearing remover shaft and drive the bearing out of the wheel hub. Remove the distance collar and drive out the other bearing.


TOOLS:

Bearing remover head, 20 mm 07746-0050600

Bearing remover shaft 07GGD-0010100

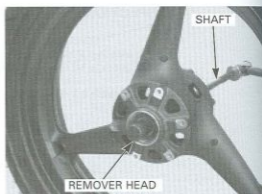

ASSEMBLY

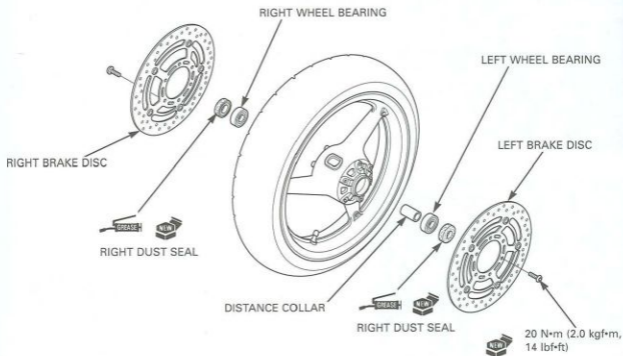

Drive in a new right bearing. Install the distance collar, then drive in the left bearing using the special tool.

Never install the old bearings. Once the bearings have been removed, they must be replaced with new ones.

TOOLS:

Driver
Attachment, 42 X 47 mm
Pilot, 20 mm

07749-0010000
07746-0010300
07746-0040500

