



DISASSEMBLY


Remove the bolts and brake disc.

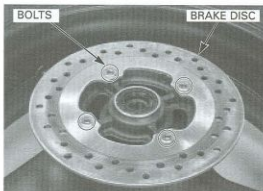

Remove the driven flange assembly from the left wheel hub.

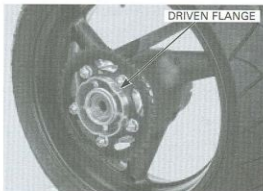

Remove the wheel damper rubbers.
Remove the O-ring.

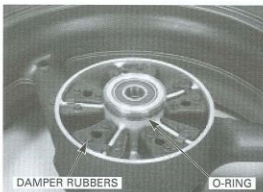

Driven flange bearing removal
Loosen the driven sprocket nuts.

Remove the driven flange from the wheel hub, then remove the driven sprocket nuts and sprocket.

Remove the driven flange bearing and collar.

