

Never install the old bearings, once the bearings have been removed, the bearings must be replaced with new ones.


Install the distance collar

Drive in the left side bearing using the same tools.

Drive the driven flange bearing out using the special tools.

TOOLS:

Driver	07749-0010000
Attachment, 28 X 30 mm	07746-1870100
Pilot, 20 mm	07746-0040500

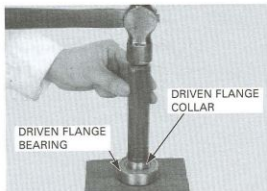


Driven flange bearing installation


Drive the new driven bearing into the driven flange using the special tools.

TOOLS:

Driver	07749-0010000
Attachment, 52 X 55 mm	07746-0010400
Pilot, 20 mm	07746-0040500

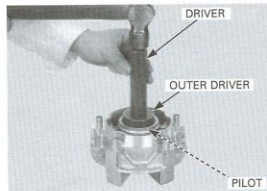

Install the wheel damper rubbers into the wheel hub. Apply oil to the new O-ring and install it into the groove of the wheel hub.

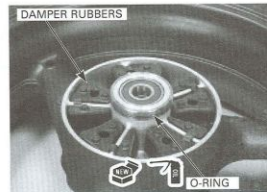

If the driven sprocket was removed, install the driven sprocket and temporarily tighten the nuts.

