

Mount the wheel, tire and brake disc assembly on an inspection stand.

Spin the wheel, allow it to stop, and mark the lowest (heaviest) part of the wheel with chalk.

Do this two or three times to verify the heaviest area. If the wheel is balanced, it will not stop consistently in the same position.


To balance the wheel, install balance weights on the lightest side of rim, the side opposite the chalk marks. Add just enough weight so the wheel will no longer stop in the same position when it is spun.

Do not add more than 60 g (2.1 oz) to the rear wheel.



### INSTALLATION

Apply grease and install the new dust seal to the right side.

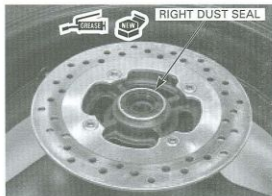

Apply grease and install the dust seal to the left side.



Apply grease to the side collars inside and grooves.

Install the side collars.

