


Connect a bleed hose to the caliper bleed valve.

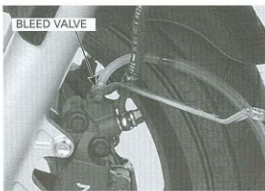

Loosen the bleed valve and pump the brake lever or pedal.  
Stop pumping the lever or pedal when no more fluid flows out of the bleed valve.



## BRAKE FLUID FILLING/BLEEDING

Close the bleed valve.

Fill the reservoir with DOT 4 brake fluid from a sealed container.


### NOTE:

- Use only DOT 4 brake fluid from a sealed container.
- Do not mix different types of fluid. They are not compatible.

*Check the fluid level often while bleeding the brakes to prevent air from being pumped into the system.*

Connect a commercially available brake bleeder to the bleed valve.

Pump the brake bleeder and loosen the bleed valve, adding fluid when the fluid level in the master cylinder reservoir is low.

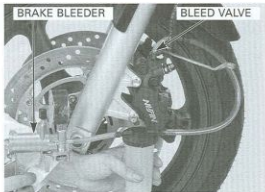

*If air is entering the bleeder from around the bleed valve threads, seal the threads with teflon tape.*

When using a brake bleeding tool, follow the manufacturer's operating instructions.

Repeat the previous step procedures until air bubbles do not appear in the plastic hose.

Close the bleed valve and operate the brake lever or pedal.

If it still feels spongy, bleed the system again.