


Connect the ECT/thermo sensor connector.

Fill the system and bleed the air (page 6-4).

ECT SENSOR CONNECTOR

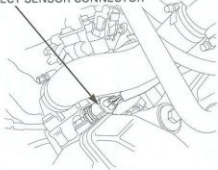

## OIL PRESSURE SWITCH

### INSPECTION

If the oil pressure warning indicator stays on while the engine is running, check the engine oil level before inspection.

Make sure that the oil pressure warning indicator come on with the ignition switch ON.

OIL PRESSURE WARNING INDICATOR




If the indicator does not come on, inspect as follows.

Remove the dust cover.

Remove the bolt and oil pressure switch terminal.

DUST COVER TERMINAL

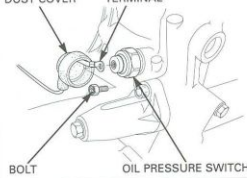

Short the oil pressure switch wire terminal to ground using a jumper wire.

The oil pressure warning indicator comes on when the ignition switch is ON.

If the light does not come on, check the sub-fuse (10A).

