


MAINTENANCE

Remove the fuel tank mounting collar, temporarily install a fuel tank mounting bolts.



Support the front end of the fuel tank using a suitable support as shown.

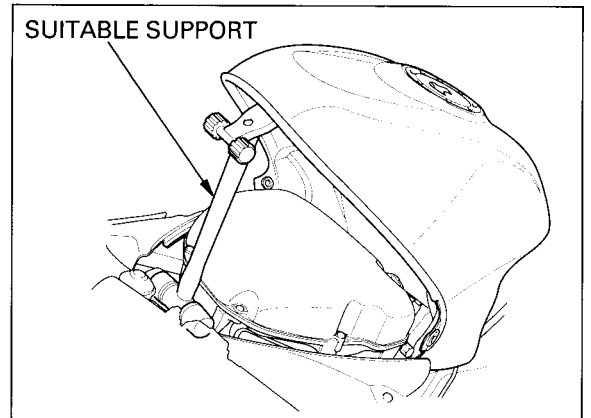

Disconnect the IAT (Intake Air Temperature) sensor connector.

Remove the screws and air cleaner housing cover.



Remove and discard the air cleaner element in accordance with the maintenance schedule (page 3-3).

Also replace the air cleaner element any time it is excessively dirty or damage.

Install the removed parts in the reverse order of removal.

