


CAM PULSE GENERATOR


REMOVAL/INSTALLATION

Support the front end of the fuel tank (page 3-5).

Disconnect the cam pulse generator 2P (Natural) connector.

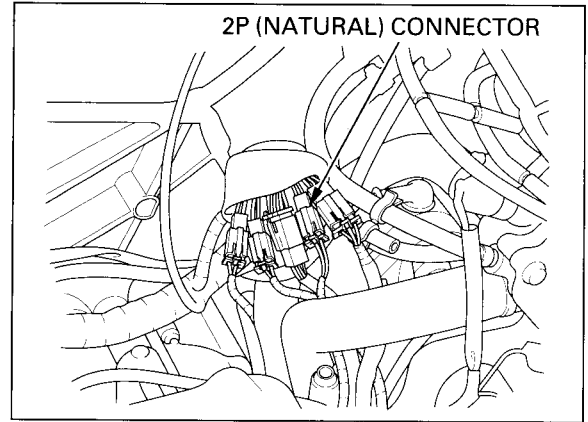

Remove the bolts and cam pulse generator cover assembly from the cylinder head.

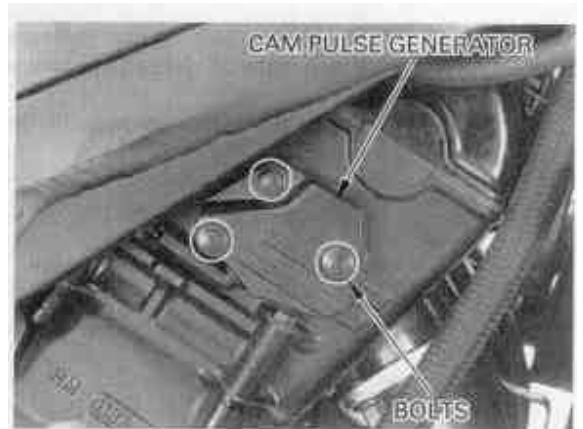

Remove the gasket.
Remove the socket bolts and cam pulse generator from the cover.



Apply sealant to the cam pulse generator wire grommet.
Install the cam pulse generator onto the cam pulse generator cover and tighten the two socket bolts.

Install the new gasket onto the cam pulse generator cover.
Install the cam pulse generator cover assembly onto the cylinder head aligning the dowel pins with the holes in the cylinder head.

