


REMOVAL/INSTALLATION

Support the front end of the fuel tank (page 3-5).

Disconnect the speed sensor 3P (White) connector.

Release the speed sensor wire from the clamp.
Remove the bolts and speed sensor.

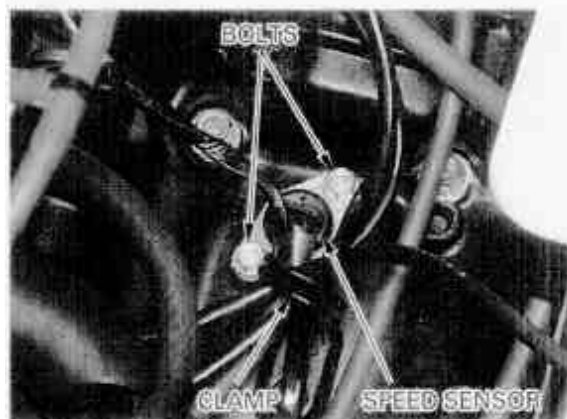


Check the O-ring is in good condition, replace if necessary.

Install the speed sensor into the upper crankcase.



Install and tighten the mounting bolts securely.
Route the sensor wire and clamp it.

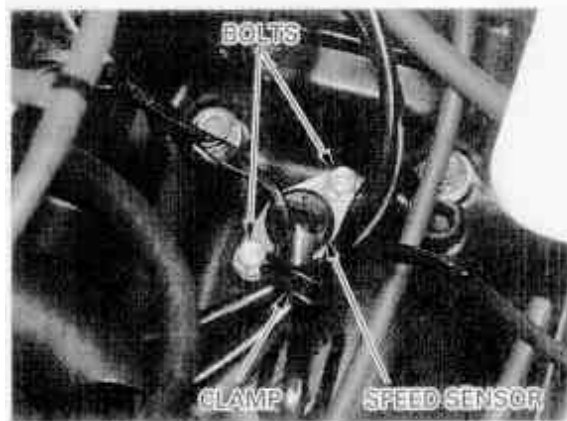

Connect the speed sensor 3P (White) connector.

