

Frame	Location	Material	Remarks
	Side stand pivot bolt sliding surface Main stand pivot bolt sliding surface Gearshift pedal pivot Brake pedal pivot Throttle grip sliding surface Wheel dust seal lips Swingarm pivot radial ball bearing Swingarm pivot distance collar outer surface Throttle cable end	Multipurpose grease	
	Swingarm pivot dust seal lips Swingarm pivot needle bearing Shock arm pivot dust seal lips Shock arm pivot needle bearing Shock link pivot dust seal lips Shock link pivot needle bearing Rear shock absorber lower mount dust seal lips Rear shock absorber lower mount needle bearing	Molybdenum disulfide grease	
	Driven sprocket nut threads and seating surface	Engine oil	
	Handlebar grip rubber inner surface	Honda Bond A or an equivalent	
	Brake reservoir Master piston/piston seals Caliper piston Caliper piston seals	DOT 4 brake fluid	
	Brake caliper boots inside Master cylinder rubber boots inside Rear master cylinder push rod top Rear brake caliper pin bolt sliding surface	Silicone grease	
	Fuel valve lever boss Caliper bracket/caliper pin bolt/socket bolt threads Caliper bracket bolt threads Ignition switch bolt threads Fork socket bolt threads Handlebar weight screw threads Drive chain slider screw threads	Locking agent	Clean and apply to the threads
	Air cleaner case inlet tube joint	Sealant	