


Check the O-ring for damage or deterioration. Replace it with a new one if necessary.

Apply molybdenum disulfide grease to the pulse generator cover cap threads and tighten it.

**Torque : 18 N · m (1.8 kg-m, 13 ft-lb)**

Install the following :

- cylinder head cover (page 8-2)
- air cleaner case base (page 6-3)
- radiator (page 5-5)

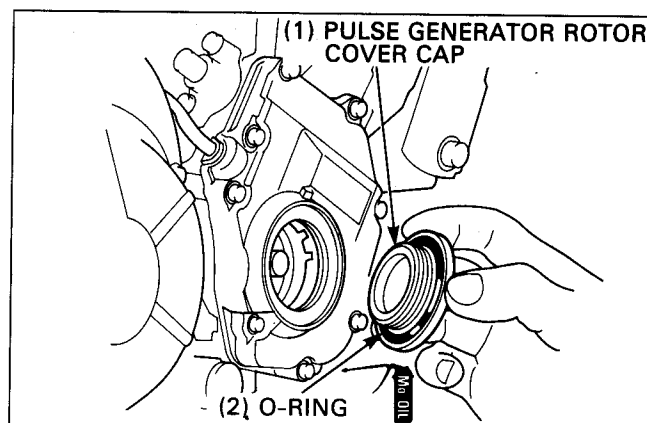


## Carburetor Synchronization

### NOTE

- Refer to section 2 of the Common Service Manual for carburetor synchronization procedure.
- Synchronize the carburetors with the engine at normal operating temperature and the transmission in neutral.

Remove the fuel tank (page 2-11).


Remove the rubber cap from the No.2 carburetor vacuum joint.

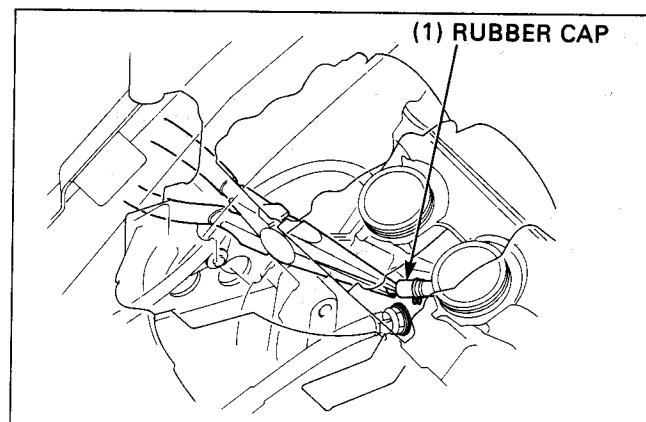

### CAUTION

- Remove the rubber cap by pinching the end of the cap. Do not pinch the cap body or it will be damaged.

Remove the vacuum plugs from the No.3 and No.4 carburetor.

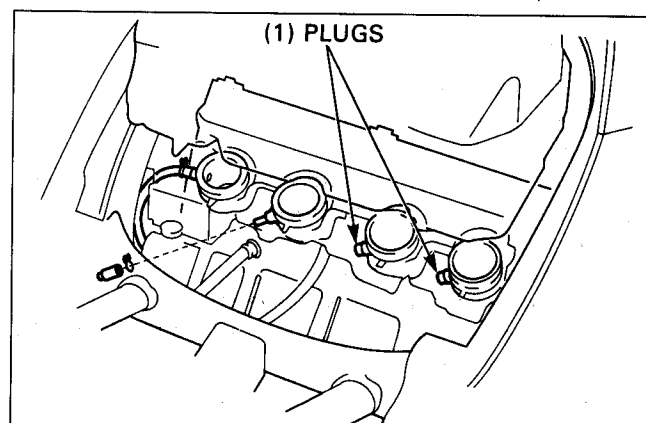

Screw the adaptors in the No.3 and No.4 carburetor vacuum holes.

Connect the vacuum tubes to the carburetor.

