

Coolant Draining

⚠ WARNING

- Wait until the engine is cool before servicing the cooling system. Removing the radiator cap while the engine is hot and the coolant is under pressure may serious scalding.

NOTE

- For coolant replacement, refer to section 5 of the Common Service Manual.

Remove the left side fairing (page 2-3).

Remove the water pump drain bolt and sealing washer.

Remove the radiator cap and drain the coolant.

Place a suitable tray under the siphon tube joint of the reserve tank and disconnect the siphon tube from the reserve tank.

Drain the coolant from the reserve tank.

Install the water pump drain bolt with a new sealing washer, and connect the siphon tube to the reserve tank.

