


Radiator Disassembly/Assembly

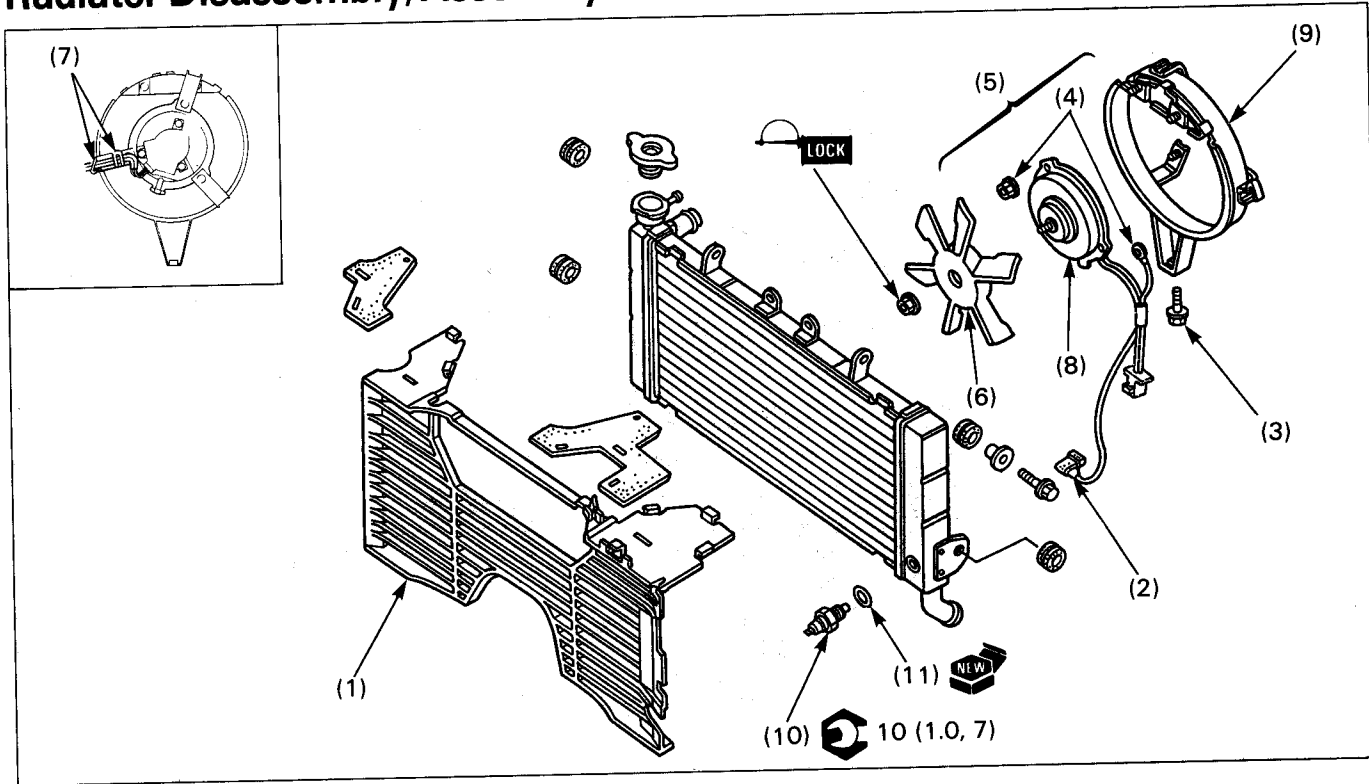

Requisite Service

- Radiator removal/installation (page 5-5)

Procedure	Q'ty	Remarks
(1) Disassembly Order Radiator grille	1	Assembly is in the reverse order of disassembly. Remove the radiator grille by releasing the four tangs on the radiator from the slit in the grille. When installing, align the fan groove with the motor shaft. Release the fan motor wire. CAUTION • Do not overtighten the fan motor switch, or the radiator may be damaged.
(2) Fan motor switch connector	1	
(3) Fan motor mounting bolt	1	
(4) Fan motor mounting nut/terminal	2/1	
(5) Fan motor assembly	1	
(6) Cooling fan	1	
(7) Clamp	2	
(8) Fan motor	1	
(9) Fan motor shroud	1	
(10) Fan motor switch	1	
(11) O-ring	1	