


# Air Injection Control Valve Removal/Installation(SW, AR Type Only)

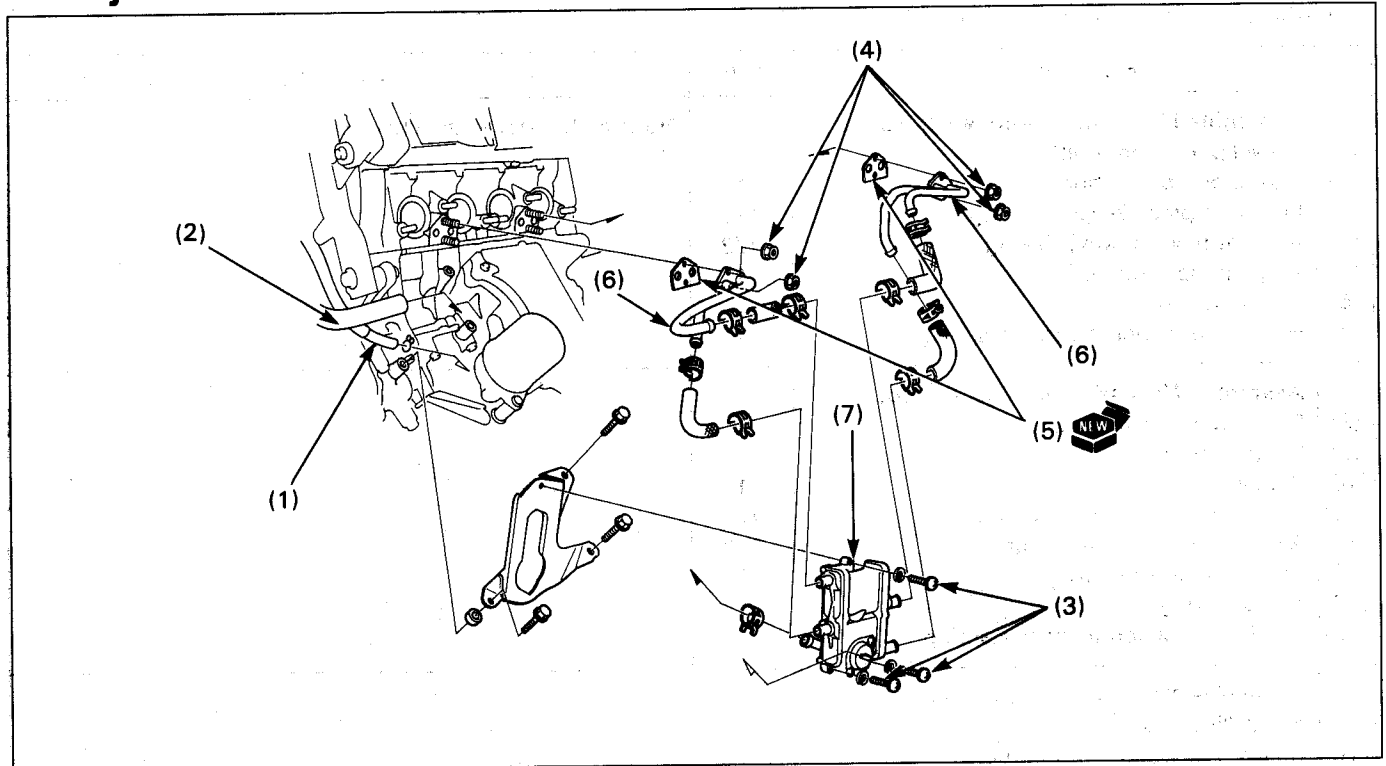

## Requisite Service

- Side fairing removal/installation(page 2-3)

Procedure	Q'ty	Remarks
<b>Removal Order</b>		Installation is in the reverse order of removal.
(1) Air Injection Control Valve (AICV) control tube	1	
(2) Air suction hose	1	
(3) Screw/Spring washer	3/3	
(4) Air inlet pipe joint nut	4	
(5) Gasket	2	
(6) Air joint pipe	2	
(7) Air Injection Control Valve (AICV) assembly	1	