


Cylinder Head

Submerge the cam chain tensioner in the clean engine oil. Fill up the cam chain tensioner with engine oil by pumping it until air bubbles stop coming out.

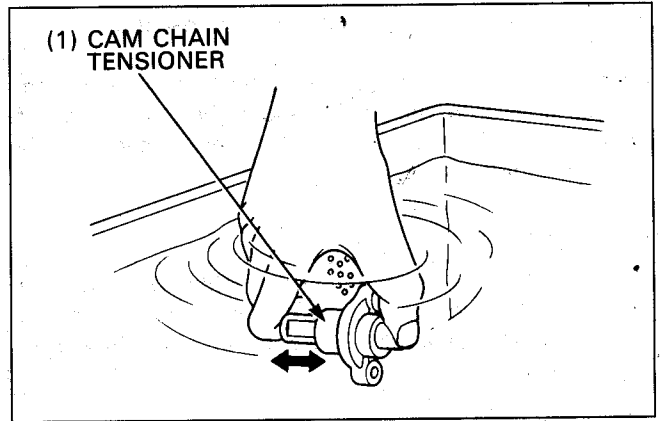

Install a new gasket, cam chain tensioner and new sealing washers, and tighten the bolts gradually.

NOTE

- Install the gasket with the paint mark positioned as shown.

Torque: 10N·m(1.0kg-m, 7ft-lb)

After installing the cam chain tensioner, make sure the timing marks on the cam sprockets align with the cylinder head upper surface facing opposite each other.

Install the cylinder head cover (page 8-3)

