

Valve Cotters Removal/Installation

Remove the valve lifters and shims.

NOTE

- Do not allow shims to fall into the crankcase. The shim(s) may occasionally stick to the valve lifter.
- Mark the positions of all valve lifters and shims to ensure correct reassembly.
- It is easy to remove the valve lifter with a valve lapping tool or magnet.
- Remove the shims with tweezers or a magnet.

Install the tappet hole protector into the valve lifter sliding surface.

S TOOL

Tappet hole protector

07HMG-MR70002

Install the valve spring compressor onto the valve and compress the valve spring.

CAUTION

- Do not compress the valve springs more than necessary to remove the valve cotters or the valve springs might be fatigue.

Remove (or install) the valve cotters.

S TOOL

Valve spring compressor attachment 07959-KM30101

Valve spring compressor

07757-0010000

