

Requisite Service

- Side fairing removal/installation (page 2-3)
- Engine oil draining (drain bolt location:3-3, draining procedure: section 2 of the Common Service Manual)

Procedure		Q'ty	Remarks
Removal Order			
(1)	Clutch cable holder	1	Installation is in the reverse order of removal.
(2)	Right crankcase cover bolt	8	
(3)	Right crankcase cover	1	Loose the bolts in a crisscross pattern in several steps.
(4)	Gasket	1	
(5)	Oil filler cap/dip stick	1	
(6)	O-ring	1	
(7)	Dowel pin	2	
(8)	Clutch lifter piece	1	
(9)	Clutch lifter arm	1	
(10)	Washer	1	
(11)	Return spring	1	
(12)	Oil seal	1	