

⚠ WARNING

- A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.

NOTE

- Replace the wheel bearings in pairs.
- Do not add more than 60 grams to the wheel balance weight.

Requisite Service

- Front wheel removal/installation(page 12-4)

Procedure		Q'ty	Remarks
	Disassembly Order		Assembly is in the reverse order of disassembly.
(1)	Speedometer gear box	1	When installing, engage the tabs of the speedometer gear with the tangs of the retainer.
(2)	Speedometer gear	1	
(3)	Washer	2	
(4)	Dust seal	2	
(5)	Speedometer gear retainer	1	
(6)	Brake disc bolt	12	
(7)	Brake disc	2	NOTE • Install each brake disc to its original location. • Install each brake disc with the stamped side facing out.
(8)	Shim	12	
(9)	Left wheel bearing(6004)	1	
(10)	Distance collar	1	
(11)	Right wheel bearing (6004)	1	