

▲ WARNING

- The fork tube cap is under spring pressure. Use care when removing it and wear eye and face protection.

NOTE

- Temporarily install the fork spring, spring seat, spacer and fork tube cap to loosen the socket bolt.

Requisite Service

- Fork removal/installation(page 12 – 8)

	Procedure	Q'ty	Remarks
(1)	Fork tube cap	1	Before removing the fork tube cap, turn the preload adjuster counterclockwise fully to lessen spring pressure.
(2)	O-ring	1	
(3)	Spacer	1	
(4)	Spring seat	1	
(5)	Fork spring	1	
(6)	Dust seal	1	After removing the spring, pour out any remaining fork oil. When removing, be careful not damage the fork tube sliding surface.
(7)	Stopper ring	1	
(8)	Fork socket bolt	1	
(9)	Sealing washer	1	
(10)	Fork tube	1	
(11)	Oil lock piece	1	
(12)	Fork piston	1	
(13)	Fork piston ring	1	NOTE
(14)	Rebound spring	1	• Do not remove the fork piston ring unless it is necessary to replace.
(15)	Oil seal	1	
(16)	Back up ring	1	
(17)	Slider bushing	1	
(18)	Fork tube bushing	1	NOTE
(19)	Fork slider	1	• Do not remove the fork piston ring unless it is necessary to replace.