


Shock Absorber Disassembly/Assembly

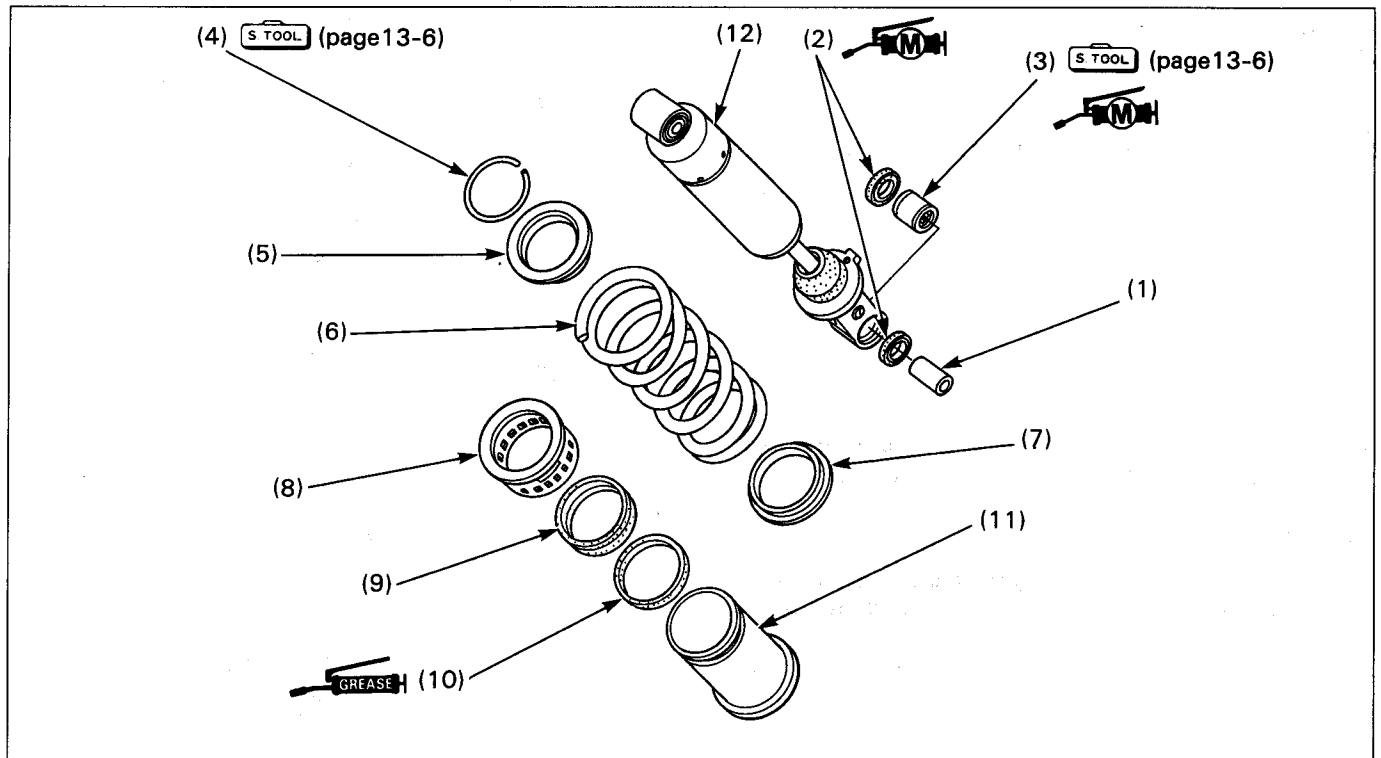

⚠ WARNING

- The shock absorber contains nitrogen under high pressure. Do not allow fire or heat near the shock absorber.
- Before disposal of shock absorber, release the nitrogen.
(Step : section 19 of the Common Service Manual ; Drilling point : page 1-11)

Requisite Service

- Shock absorber removal/installation (page 13-4)

Procedure	Q'ty	Remarks
Disassembly Order		Assembly is in the reverse order of disassembly.
(1) Lower mount collar	1	
(2) Dust seal	1	
(3) Needle bearing	1	Refer to page 13-6 for replacement.
(4) Stopper ring	1	Refer to page 13-6 for removal and installation.
(5) Upper spring seat	1	
(6) Spring	1	
(7) Lower spring seat	1	
(8) Spring preload adjuster	1	
(9) Dust seal	1	
(10) Inner spring seat	1	
(11) Spring guide	1	Install the spring guide aligning the cutout in the guide with the tab on the spring guide stopper.
(12) Dumper unit assembly	1	