


# Ignition Coil Removal/Installation

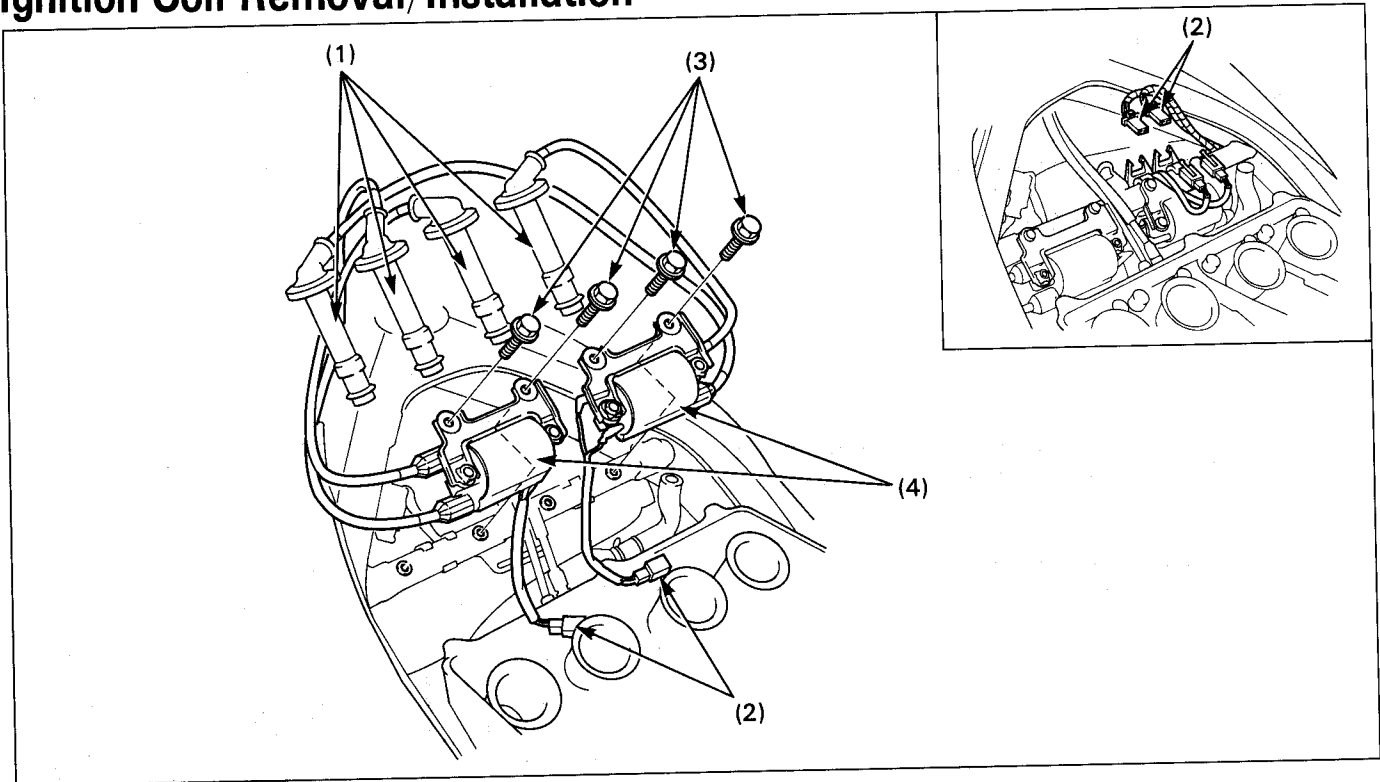

## Requisite Service

- Maintenance lid removal/installation (page 2-3)
- Air cleaner case removal/installation (page 6-3)

Procedure		Q'ty	Remarks
(1)	<b>Removal Order</b> Spark plug cap	4	Installation is in the reverse order of removal. The cylinder numbers are printed on each high tension cord so install each spark plug cap on the correct cylinder.
(2)	Ignition coil connector	4	
(3)	Ignition coil mounting bolt	4	
(4)	Ignition coil	2	