

Headlight Bulb Replacement

⚠ WARNING

- Halogen headlight bulb becomes very hot while the head light is ON, and remain hot for a while after it is turned OFF. Be sure to let it cool down before servicing.

CAUTION

- Wear clean gloves while replacing the bulb. Do not put finger prints on the headlight bulb, as they may create hot spots on the bulb and cause it to break.
- If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol to prevent its early failure.
- Be sure to install the dust cover after replacing the bulb.

Remove the tapping screws and release the claws of the cowl under lid from the front cowl stay. Remove the front cowl under lid.

Disconnect the headlight bulb socket and remove the rubber cover.

Release the bulb retainer and remove the headlight bulb.

Install a new bulb and the removed parts in the reverse order of removal.

