

Requisite Service

- Combination meter removal/installation (page 18-5)

Procedure		Q'ty	Remarks
	Disassembly Order		Assembly is in the reverse order of disassembly.
(1)	Wire clamp	1	
(2)	Bulb socket	11	Install each bulb socket referring the wire color code stamped on the meter case.
(3)	Wire terminal	5	
(4)	Reset knob	1	
(5)	Meter cover screw	6	
(6)	Coolant temperature gauge	1	NOTE
			<ul style="list-style-type: none"> • Before assembling the meter case and meter cover, temporarily secure the coolant temperature gauge with the wire terminal screws. • When securing the coolant temperature gauge with the wire terminals, tighten the terminal screws with the meter facing up.
(7)	Meter lens	1	
(8)	Indicator lens (Neutral/Turn signal)	1	
(9)	Indicator lens (High beam/Oil temperature/ Turn signal)	1	
(10)	Screw	3	
(11)	Rubber cover retainer	1	
(12)	Rubber cover	1	Align the four holes in the rubber cover with the pins on the meter cover.
(13)	Screw	2	
(14)	Tachometer	1	
(15)	Screw	2	
(16)	Speedometer	1	