


# Side Stand Switch


## Inspection

Remove the fuel tank (page 2-11).  
 Disconnect the side stand switch 3P mini connector.

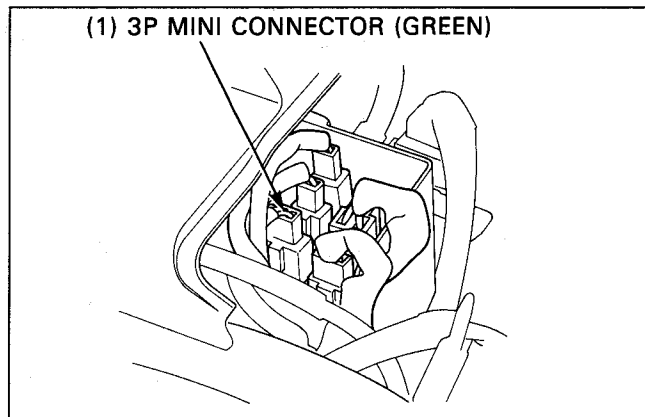

Check for continuity between each terminals as below.  
 There should be continuity between the ○—○ positions on the chart below.

	Green/White	Yellow/Black	Green
Side stand down		○—○	○—○
Side stand up	○—○	○—○	○—○

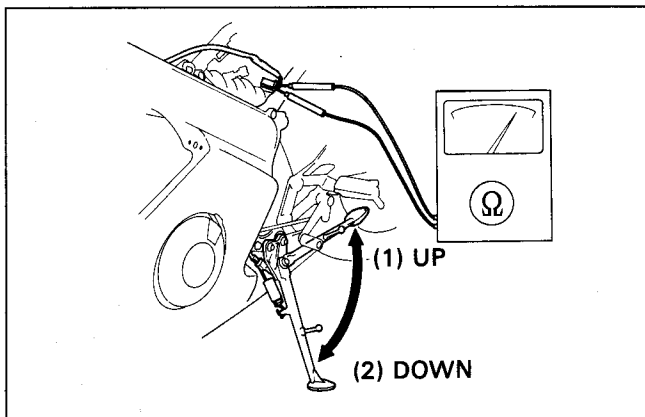

## Removal/Installation

Remove the fuel tank (page 2-11).

Disconnect the side stand switch 3P mini connector (Green) and remove the bolt and side stand switch.

Install the side stand switch aligning the pin on the switch with the hole in the side stand.  
 Secure the side stand switch with the bolt.

**Torque : 10 N · m (1.0kg-m, 7 ft-lb)**

Install the removed parts in the reverse order of removal.

