

Index

Air Cleaner Case Removal/Installation.....	6-3	Oil Cooler Removal/ Installation.....	4-6
Air Cleaner.....	3-5	Oil Pan Removal/ Installation.....	4-3
Air Injection Control Valve Removal/ Installation (SW,AR Type Only).....	6-2	Oil Pump Disassembly/ Assembly.....	4-5
Alternator Removal/Installation.....	15-8	Oil Pump Removal/Installation.....	4-4
Battery Removal/Installation.....	15-4	Pilot Screw Adjustment.....	6-13
Cable & Harness Routing.....	1-20	Piston/ Connecting Rod Removal/ Installation..	10-4
Camshaft Removal/ Installation.....	8-2	Pulse Generator Rotor Cover Removal/ Installation.....	16-10
Carburetor Combination.....	6-10	Pulse Generator.....	16-9
Carburetor Disassembly/ Assembly.....	6-8	Radiator Disassembly/ Assembly.....	5-6
Carburetor Removal/ Installation.....	6-4	Radiator Removal/ Installation.....	5-5
Carburetor Separation.....	6-6	Rear Brake Caliper Disassembly/ Assembly.....	14-12
Carburetor Synchronization.....	3-9	Rear Brake Caliper Removal/ Installation.....	14-11
Charging Coil Inspection.....	15-11	Rear Brake Pad Replacement.....	14-2
Charging System Inspection.....	15-6	Rear Fender A Removal/ Installation.....	2-8
Circuit Diagram Charging System/ Alternator..	15-2	Rear Fender B Removal/ Installation.....	2-7
Circuit Diagram Electric Starter.....	17-2	Rear Master Cylinder Disassembly/ Assembly..	14-10
Circuit Diagram Ignition System.....	16-2	Rear Master Cylinder Removal/ Installation.....	14-8
Clutch Installation.....	9-12	Rear Wheel Disassembly/Assembly.....	13-3
Clutch Removal.....	9-4	Rear Wheel/Removal/Installation.....	13-2
Combination Meter Bulb Replacement.....	18-4	Regurator/ Rectifier.....	15-7
Combination Meter Disassembly/ Assembly....	18-6	Reserve Tank Removal/ Installation.....	5-8
Combination Meter Removal/ Installation.....	18-5	Right Crankcase Cover Removal/ Installation..	9-2
Coolant Draining.....	5-3	Right Handlebar Removal/ Installation.....	12-2
Coolant Temperature Gauge Inspection.....	18-8	Seat Removal/ Installation.....	2-2
Countershaft Disassembly.....	11-10	Service Access Guide.....	3-2
Crankcase Assembly.....	10-6	Service Information Brake System.....	14-1
Crankcase Separation.....	10-2	Charging System/ Alternator.....	15-1
Crankshaft Bearing Replacement.....	11-4	Clutch/ Gearshift Linkage.....	9-1
Crankshaft Removal/ Installation.....	11-2	Cooling System.....	5-1
Cylinder Head Disassembly/ Assembly.....	8-8	Crankcase/ Cylinder/ Piston.....	10-1
Cylinder Head Removal/ Installation.....	8-7	Crankshaft/ Transmission.....	11-1
Engine Removal/ Installation.....	7-2	Cylinder Head.....	8-1
Exhaust System Removal/ Installation.....	2-10	Electric Starter.....	17-1
Flywheel Removal/Installation.....	15-9	Engine Removal/ Installation.....	7-1
Fork Assembly.....	12-12	Frame/ Body Panels/ Exhaust System..	2-1
Fork Disassembly.....	12-10	Front Wheel/ Suspension/ Steering.....	12-1
Fork Removal/ Installation.....	12-8	Fuel System.....	6-1
Front Brake Caliper Disassembly/ Assembly....	14-6	Ignition System.....	16-1
Front Brake Caliper Removal/ Installation.....	14-5	Lights/ Meters/ Switches.....	18-1
Front Cowl Disassembly/ Assembly.....	2-6	Lubrication System.....	4-1
Front Cowl Removal/ Installation.....	2-4	Maintenance.....	3-1
Front Master Cylinder Disassembly/ Assembly	14-4	Rear Wheel/ Suspension.....	3-1
Front Master Cylinder Removal/ Installation....	14-3	Shift Drum/ Shift Forks Removal/ Installation..	9-10
Front Wheel Disassembly/Assembly.....	12-6	Shock Absorber Disassembly/ Assembly.....	13-5
Front Wheel Removal/Installation.....	12-4	Shock Absorber Removal/ Installation.....	13-4
Fuel Tank Removal/ Installation.....	2-11	Side Cover Removal/ Installation.....	2-2
Gearshift Linkage Removal/ Installation.....	9-8	Side Fairing Removal/ Installation.....	2-3
General Safety.....	1-1	Side Stand.....	3-10
Headlight Bulb Replacement.....	18-3	Side Stand Switch.....	18-9
Ignition Coil Inspection.....	16-7	Spark Plug.....	3-5
Ignition Coil Removal/ Installation.....	16-8	Specifications.....	1-4
Ignition Switch Removal/ Installation.....	18-8	Starter Motor Disassembly/ Assembly.....	17-6
Ignition System Inspection.....	16-5	Starter Motor Removal/ Installation.....	17-5
Ignition Timing.....	16-9	Steering Stem Removal/ Installation.....	12-14
Left Handlebar Removal/ Installation.....	12-3	Suspension Linkage Disassembly/ Assembly...	13-8
Lubrication & Seal Points.....	1-18	Suspension Linkage Removal/ Installation.....	13-7
Lubrication System Diagram.....	4-2	Swingarm Disassembly/ Assembly.....	13-12
Mainshaft Disassembly/ Assembly.....	11-8	Swingarm Removal/ Installation.....	13-10
Maintenance Schedule.....	3-4	System Flow Pattern.....	5-2
Model Identification.....	1-3	System Location Charging System/ Alternator	15-2
Oil Cooler Disassembly/Assembly.....	4-7	System Location Electric Starter.....	17-2