

Index

System Location Ignition System.....	16-2
System Location Lights/Meters/Switches.....	18-2
Tachometer Inspection.....	18-8
Tail Cowl Removal/Installation	2-7
Thermostart Removal/ Installation.....	5-4
Tools.....	1-17
Torque Values.....	1-14
Transmission Removal/ Installation.....	11-6
Troubleshooting Brake System.....	14-1
Charging System/ Alternator.....	15-3
Clutch/Gearshift Linkage	9-1
Cooling System.....	5-1
Crankcase/Cylinder/Piston.....	10-1
Crankshaft/ Transmission.....	11-1
Cylinder Head.....	8-1
Electric Starter.....	17-3
Engine Does Not Start or is Hard to	
Start.....	20-1
Engine Lacks Power.....	20-2
Frame/ Body Panels/ Exhaust System..	2-1
Front Wheel/ Suspension/ Steering.....	12-1
Fuel System.....	6-2
Ignition System.....	16-3
Lubrication System.....	4-1
Poor Handling.....	20-4
Poor Performance at High Speeds.....	20-4
Poor Performance at Low And Idle	
Speeds.....	20-3
Rear Wheel/ Suspension.....	13-1
Valve Clearance.....	3-5
Water Pump Disassembly/Assembly.....	5-7
Wiring Diagram.....	19-1