

REAR COWL

REMOVAL


Remove the following:

- Seat (page 3-4)
- Passenger seat (page 3-4)
- Side covers (page 3-4)

Remove the four bolts.

Disconnect the stop/tail light connector.

Carefully pull both out sides of the rear cowl, then remove it backward.

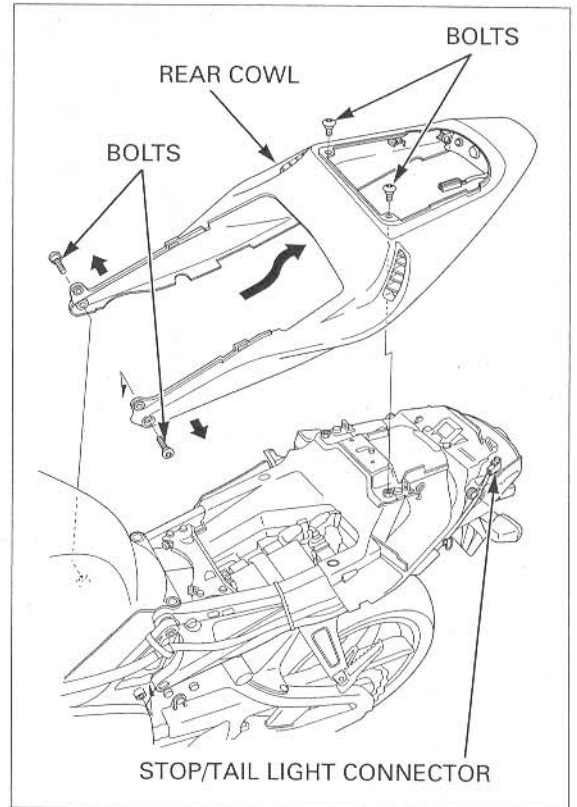

INSTALLATION

