


## FRAME/BODY PANELS/EXHAUST SYSTEM


Remove the head light unit from the upper cowl (page 20-6).

Remove the screws and front air duct covers from the upper cowl.

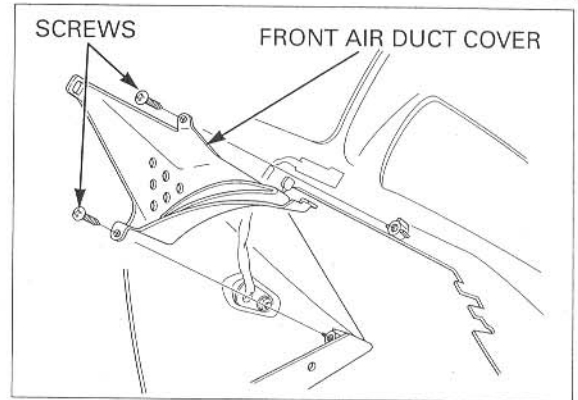

Remove the nuts and setting plates, then remove the front turn signal units.

Assembly is in the reverse order of disassembly.

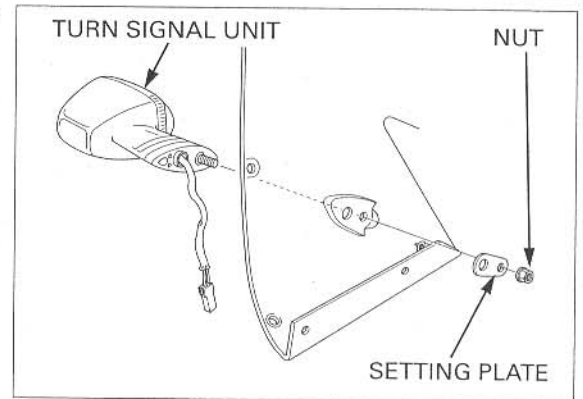

## INSTALLATION

